


# FITTING INSTRUCTIONS FOR BUCKET SEATS

**1.**


Ensure you have the correct cover for the left or right seat. For seats with separate head-rests, the headrest must be removed first.

Place the seat cover over the back of the seat and pull down. Make sure the front panel is square on the front of the seat.

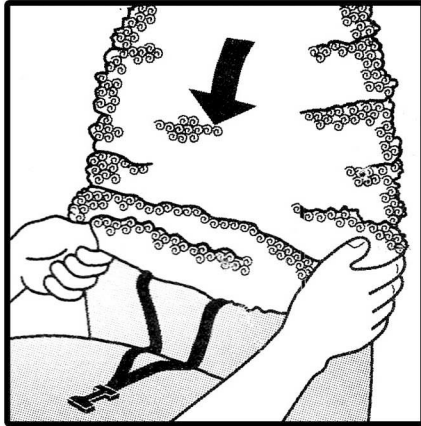


**2.**

Push the centre strap(s) through the middle of the seat, enabling it to be pulled through from behind.

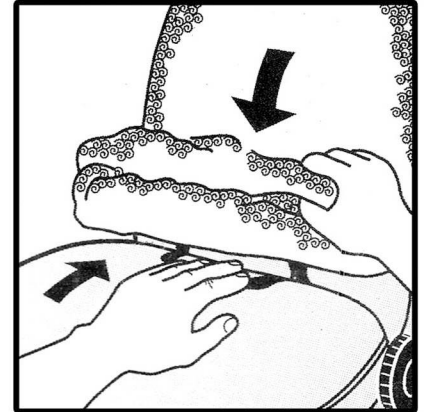


**3.**

Pull the seat cover forward and neatly position the front and side panels down the base of the seat.

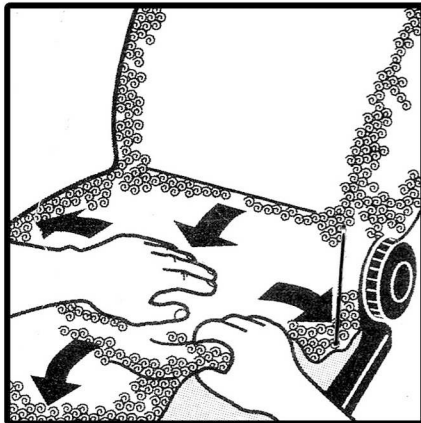


**4.**

For seats with side plastic mouldings it is preferable to position the seat cover between the moulding and the seat thereby allowing access to any seat controls.

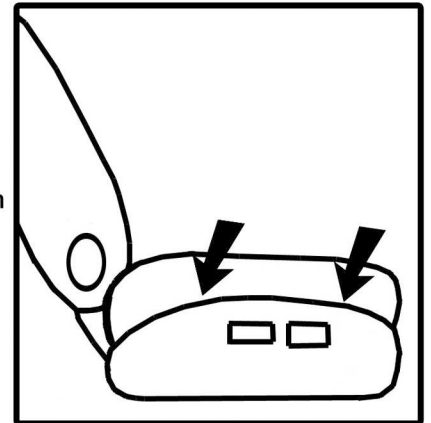


**5.**

Smooth out the seat cover and pull the front tie(s) under the seat. Ensure the centre back seam is straight. The seat cover will mould to the shape of the seat after a couple of uses.

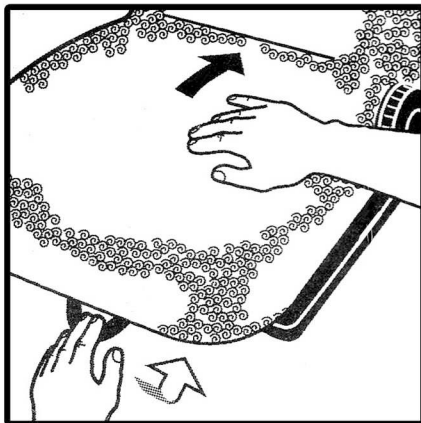

**6.**

Make sure all straps are in position and not interfering with the seat running tracks or other seat controls. Clip together and pull for tension.

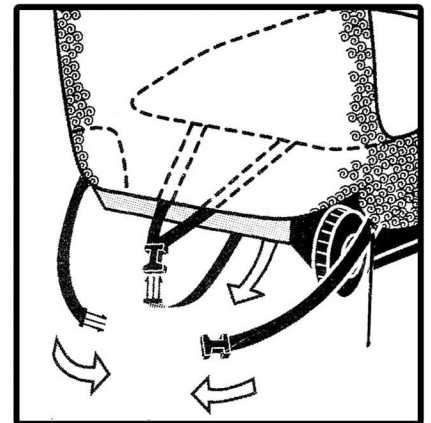

# FITTING INSTRUCTIONS FOR COMMON BENCH SEATS


## FULL BACKREST & FULL BASE

**1.**  
Seat bases are generally removed by pushing the base towards the rear of the vehicle and then pulling upwards, releasing clips under the seat. Then pull the base forward and remove.

**2.**  
Once removed the backrest attachment bolts or similar will be exposed. Unfasten the attachment points and the backrest will generally lift upwards for removal.

*If any problems are experienced refer to the operators operating manual.*

**3.**  
Fit the covers to each piece and refit to the vehicle.

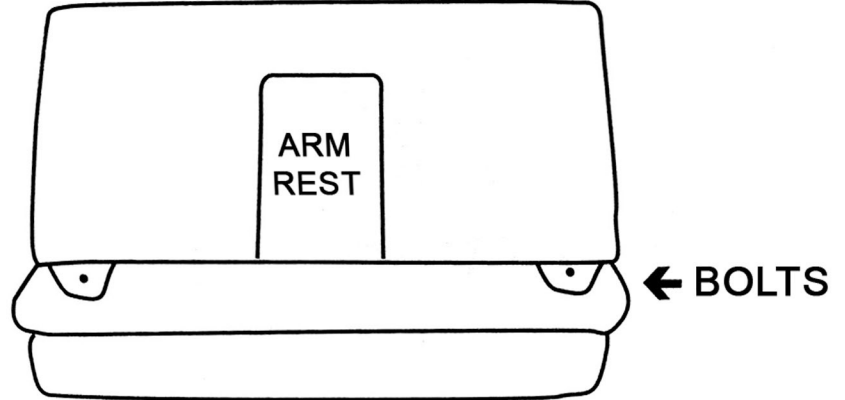

## SPLIT BACKREST & FULL BASE

**1.**  
Remove the seat base as per instruction above.

**2.**  
Once removed the Side Bolster attachment bolts or similar will be exposed. Unfasten the attachment points and the bolsters will generally lift upwards for removal.

*If any problems are experienced refer to the operators operating manual.*

**3.**  
The split sections do not generally need to be removed. Fold each section down individually and fit the covers accordingly.

