




# RHINO-RACK®

## TOYOTA HIGHLANDER/KLUGER GEN 4 XU70 BASE KIT RCP70-BK

### Important:

1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
3. Check the contents of kit before commencing fitment and report any discrepancies.
4. Place these instructions in the vehicle's glove box after installation is complete.
5. These instructions must be followed for warranty to be upheld.

**Fit Time:** 1 hour

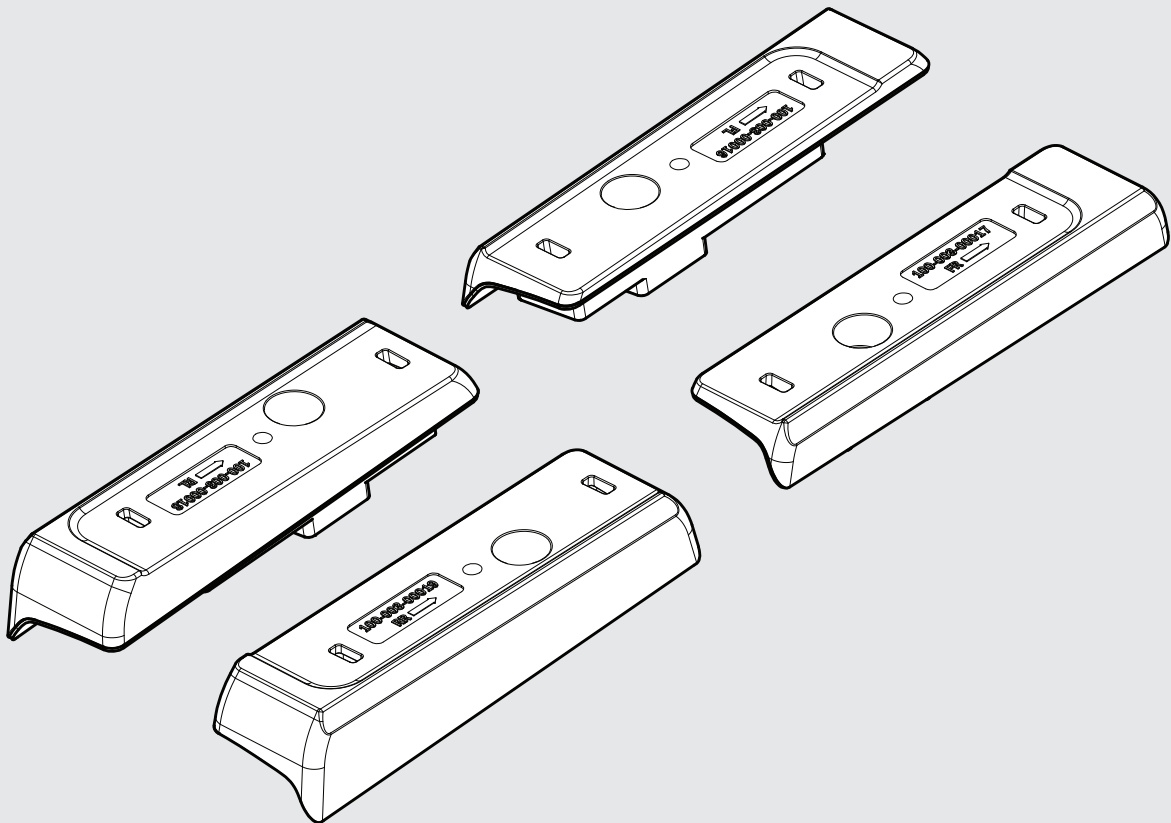

**Rhino-Rack AUSTRALIA**  
22A Hanson Pl,  
Eastern Creek, NSW, 2766  
(02) 8846 1900  
rhinorack.com.au

**Rhino-Rack USA**  
Unit D, 2450 Airport Blvd,  
Aurora, CO, 80011  
877-744-6622  
rhinorack.com

**Rhino-Rack CANADA**  
19100 Airport Way  
Pitt Meadows, BC V3Y OE2  
rhinorack.ca

Document No: 520-RFI-00009  
Issue No: 02  
Issue Date: 29/06/21

## RCP70-BK Instructions

 



### Carrying Capacity


Check your vehicle owners hand book for vehicle maximum carrying capacity. Please ensure you use the vehicle manufacturer's maximum roof allowance if it is lower than the figure listed in this instruction. Load must be evenly distributed over the system.

VISIT THE ONLINE  
LOAD LIMIT  
CALCULATOR FOR  
CURRENT LOAD DATA



**DYNAMIC LOAD LIMIT:**  
**\*USE THE VEHICLE MANUFACTURER'S MAXIMUM ROOF ALLOWANCE IF IT IS LOWER THAN THE FIGURE LISTED**


 CARGO	 SYSTEM WEIGHT	 LOAD LIMIT	OR	 Max kg
UP TO <b>70 KG</b> <b>154 lbs</b>	<b>+</b> <b>5 KG</b> <b>11 lbs</b>	<b>=</b>		UP TO <b>75 KG</b> <b>165 lbs</b>
				<b>*VEHICLE MANUFACTURER'S ROOF LOAD LIMIT</b>

 **STATIC LOAD LIMIT: UP TO 187KG / 412LBS\***


 
#### Cargo Load Limit

Total permissible weight allowed on top, and attached to roof racks whilst the vehicle is in motion.



#### System Weight

Total weight of the roof rack system. (Crossbars, Backbone, Platform)



#### Max System Load Capacity

Please ensure you use the vehicle manufacturer's maximum roof allowance if it is lower than the figure listed in the fitting chart.



#### Vehicle Manufacturer's Load Limit

Total permissible weight attached to the roof of the car. This is inclusive of the weight of the roof rack system.

### Warning

- Check part number or kit is correct for use with your vehicle.
- Do not attempt to fit the rack system to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer from where the roof racks were purchased.
- Off-road conditions can be much more rigorous. Extreme care must be taken on any driven path that does not contain a surface protection layer (tar/bitumen).
- Roof racks must be removed when vehicle is put through an automatic car wash.
- With utility vehicles, the cabin and the canopy move independently. Roof racks and vehicle can be damaged if the item transported is rigidly fixed at points on both the cabin and canopy. Instead, rigidly fix to either the cabin roof racks or the canopy roof racks.
- Always ensure you fasten your load securely.
- Use only non-stretch fastening ropes or straps to attach cargo to your load.

### In service maintenance checks

- All bolt connections should be checked after driving a short distance when you first install your roof racks.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.
- Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
- Ensure that your vehicle manufacturer's GVM, and gross axle weights are not exceeded (refer to vehicle owner's manual).

#### Torque Settings

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings:

M6: 4-5Nm (3-4lbs/ft),

M8: 8-10Nm (6-7.5lbs/ft)






 




M10: 16-18Nm (12-13lbs/ft).

### Note for Dealers and Fitters

It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.
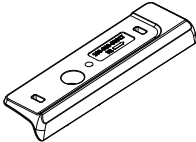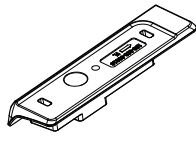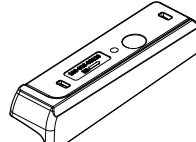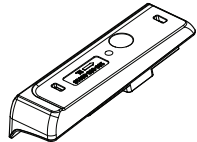
# RCP70-BK Instructions


## Parts List

<p>Front Right Pad</p>  <p><b>A</b> x1</p>	<p>Front Left Pad</p>  <p><b>B</b> x1</p>	<p>Rear Right Pad</p>  <p><b>C</b> x1</p>	<p>Rear Left Pad</p>  <p><b>D</b> x1</p>
<p>M6 X 20 Hex Bolt</p>  <p><b>E</b> x4</p>	<p>M8 X 20 Socket Head Cap Screw</p>  <p><b>F</b> x4</p>	<p>M6 Spring Washer</p>  <p><b>G</b> x4</p>	<p>M6 Flat Washer</p>  <p><b>H</b> x4</p>
<p>6mm Allen Key</p>  <p><b>I</b> x1</p>	<p>Instructions</p>  <p><b>I</b> x1</p>		


### Tools required:

- T1 - Flat blade screwdriver.
- T2 - Masking tape.
- T3 - 10mm socket wrench.

1

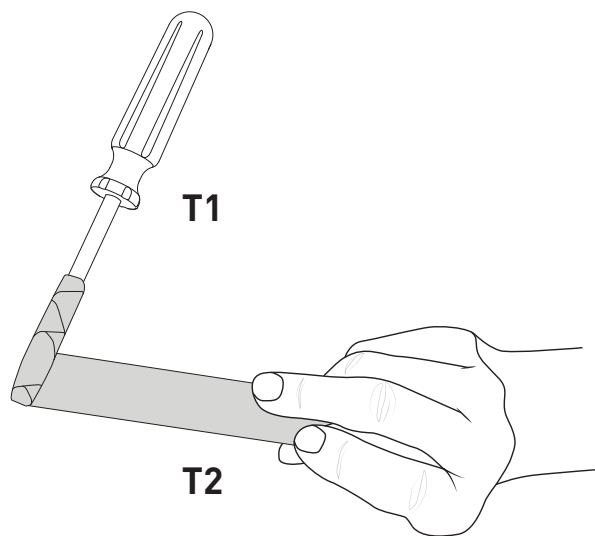

2

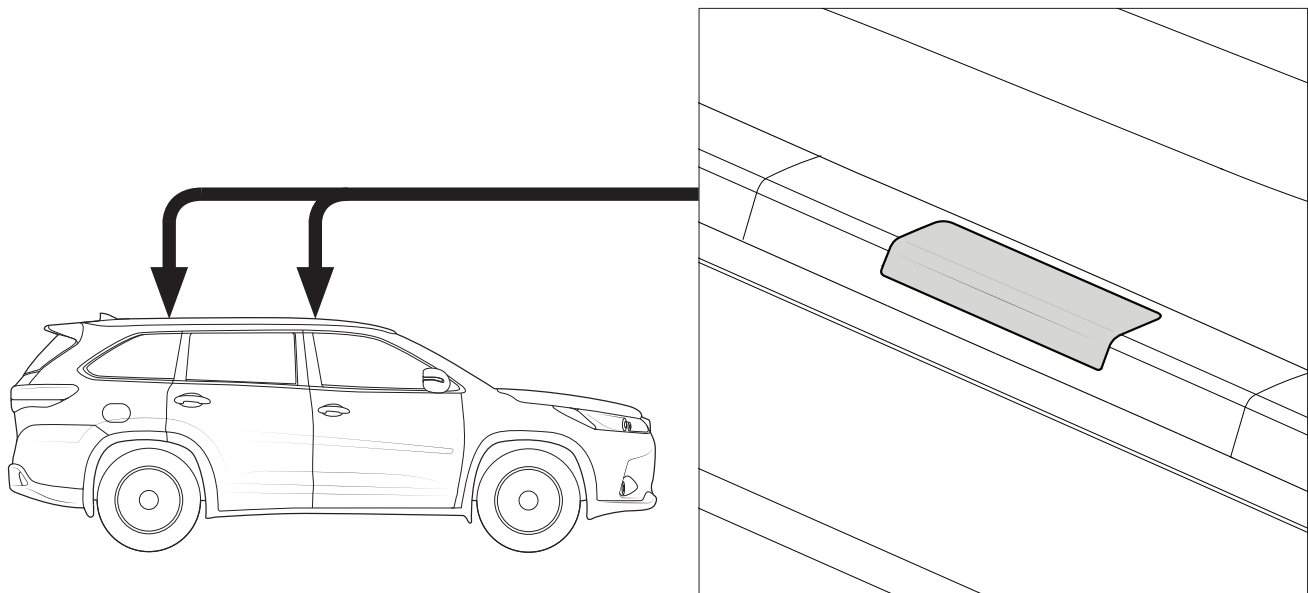

3

