

DK428 Rhino-Rack VA, Euro & HD crossbar instruction

IDENTIFICATION CHART







VA crossbar

FRONT CROSSBAR

EURO crossbar

REAR CROSSBAR

HD crossbar

Document No: R721
Issue No: 2
Issue Date: 11 Dec 2017
Prepared by: Craig Jones
Authorised by: Chris Murty

Vehicle

Mitsubishi Triton (MQ)

Double Cab

Mitsubishi L200 (MQ)

Double Cab (EUR/UK/Asia)

Mitsubishi L200 (MQ)

Double Cab (South America) Date

15-

15-

16-


		FRUNI CRUSSBAR						REAR CRUSSDAR					
7					VA	EURO	HD				VA	EURO	<u> </u>
	Crossbar	Pad	M8 Stud length (mm)	M6 Screw length (mm)	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)	Pad	M8 Stud length (mm)	M6 Screw length (mm)	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)
	1260mm	M473	30	45	143mm	N/A	934mm / 36,25/32"	M473	30	45	103mm	N/A	854mm / 33,5/8"
	1260mm	M473	30	45	143mm	N/A	934mm / 36,25/32"	M473	30	45	103mm	N/A	854mm / 33,5/8"
	1260mm	M473	30	45	143mm	N/A	934mm / 36,25/32"	M473	30	45	103mm	N/A	854mm / 33,5/8"





DK428 Rhino-Rack VA, Euro & HD crossbar instruction


Tools Required; Tape measure, Marking pen, Drill, Ø12.5mm or ½" Drill bit.

Move to the rear of the vehicle and locate the end of the roof ditch mould. Carefully lift & unclip the roof ditch mould from the rear then move towards the front unclipping along the way.

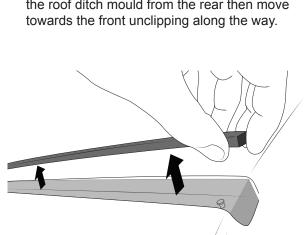




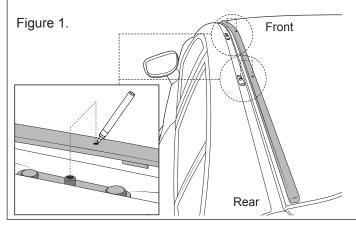






With the roof ditch mould now marked, use a 12.5mm or 1/2" drill bit and carefully drill two holes in each roof ditch mould.

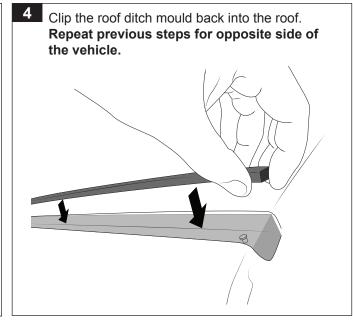

5 Insert the M8 threaded studs through the holes then fasten to the vehicles mounting points, finger tighten.

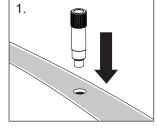

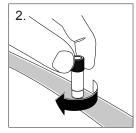



the vehicle.

