


RHINO-RACK

QMFK14

CONTROLLED

Please refer to 'Fit My Car' on the Rhino-Rack web site for comprehensive instructions on fitting racks to your vehicle.

- *Note:** RLT600 Parts as separate.
- Mark hole points through each bracket.
 - Centre punch marked hole positions.
 - Drill Ø5mm holes.
 - Vacuum swarf and clean after drilling.
 - Apply Cold Galvanising paint to holes.
 - Apply Butyl patches concentric with each drilled hole.
 - Locate the rivets through each bracket into drilled holes. Set all rivets.
 - Fasten RLT600 base as per instructions.

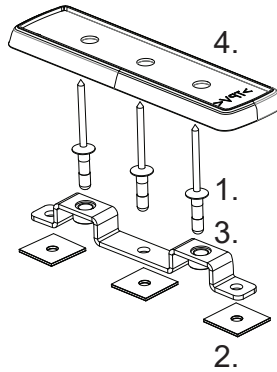

Item	Component Name	Qty	Part No.
1	Stavax Rivet BS 11 4.8mm	6	H060
2	Butyl Patch	6	CA1397
3	Quick Mount Bracket	2	CA1506
4	RLT600 Skirt High	2	M829
5	Instructions	1	R1011

Issue: 03

Document No: R1011

Prepared by: Kayle Everett


RHINO-RACK

QMFK14

CONTROLLED

Please refer to 'Fit My Car' on the Rhino-Rack web site for comprehensive instructions on fitting racks to your vehicle.

- *Note:** RLT600 Parts as separate.
- Mark hole points through each bracket.
 - Centre punch marked hole positions.
 - Drill Ø5mm holes.
 - Vacuum swarf and clean after drilling.
 - Apply Cold Galvanising paint to holes.
 - Apply Butyl patches concentric with each drilled hole.
 - Locate the rivets through each bracket into drilled holes. Set all rivets.
 - Fasten RLT600 base as per instructions.

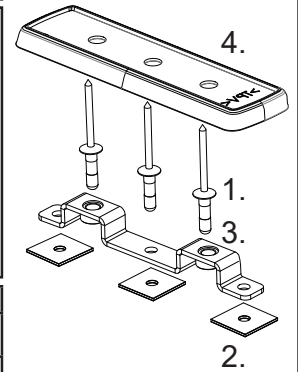

Item	Component Name	Qty	Part No.
1	Stavax Rivet BS 11 4.8mm	6	H060
2	Butyl Patch	6	CA1397
3	Quick Mount Bracket	2	CA1506
4	RLT600 Skirt High	2	M829
5	Instructions	1	R1011

Issue: 03

Document No: R1011

Prepared by: Kayle Everett


RHINO-RACK

QMFK14

CONTROLLED

Please refer to 'Fit My Car' on the Rhino-Rack web site for comprehensive instructions on fitting racks to your vehicle.

- *Note:** RLT600 Parts as separate.
- Mark hole points through each bracket.
 - Centre punch marked hole positions.
 - Drill Ø5mm holes.
 - Vacuum swarf and clean after drilling.
 - Apply Cold Galvanising paint to holes.
 - Apply Butyl patches concentric with each drilled hole.
 - Locate the rivets through each bracket into drilled holes. Set all rivets.
 - Fasten RLT600 base as per instructions.

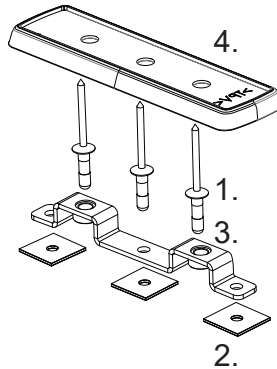

Item	Component Name	Qty	Part No.
1	Stavax Rivet BS 11 4.8mm	6	H060
2	Butyl Patch	6	CA1397
3	Quick Mount Bracket	2	CA1506
4	RLT600 Skirt High	2	M829
5	Instructions	1	R1011

Issue: 03

Document No: R1011

Prepared by: Kayle Everett


RHINO-RACK

QMFK14

CONTROLLED

Please refer to 'Fit My Car' on the Rhino-Rack web site for comprehensive instructions on fitting racks to your vehicle.

- *Note:** RLT600 Parts as separate.
- Mark hole points through each bracket.
 - Centre punch marked hole positions.
 - Drill Ø5mm holes.
 - Vacuum swarf and clean after drilling.
 - Apply Cold Galvanising paint to holes.
 - Apply Butyl patches concentric with each drilled hole.
 - Locate the rivets through each bracket into drilled holes. Set all rivets.
 - Fasten RLT600 base as per instructions.

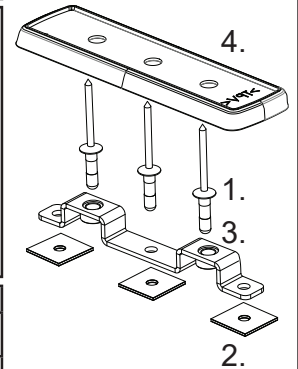

Item	Component Name	Qty	Part No.
1	Stavax Rivet BS 11 4.8mm	6	H060
2	Butyl Patch	6	CA1397
3	Quick Mount Bracket	2	CA1506
4	RLT600 Skirt High	2	M829
5	Instructions	1	R1011

Issue: 03

Document No: R1011

Prepared by: Kayle Everett


RHINO-RACK

QMFK14

CONTROLLED

Please refer to 'Fit My Car' on the Rhino-Rack web site for comprehensive instructions on fitting racks to your vehicle.

- *Note:** RLT600 Parts as separate.
- Mark hole points through each bracket.
 - Centre punch marked hole positions.
 - Drill Ø5mm holes.
 - Vacuum swarf and clean after drilling.
 - Apply Cold Galvanising paint to holes.
 - Apply Butyl patches concentric with each drilled hole.
 - Locate the rivets through each bracket into drilled holes. Set all rivets.
 - Fasten RLT600 base as per instructions.

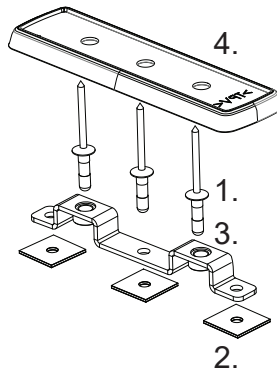

Item	Component Name	Qty	Part No.
1	Stavax Rivet BS 11 4.8mm	6	H060
2	Butyl Patch	6	CA1397
3	Quick Mount Bracket	2	CA1506
4	RLT600 Skirt High	2	M829
5	Instructions	1	R1011

Issue: 03

Document No: R1011

Prepared by: Kayle Everett


RHINO-RACK

QMFK14

CONTROLLED

Please refer to 'Fit My Car' on the Rhino-Rack web site for comprehensive instructions on fitting racks to your vehicle.

- *Note:** RLT600 Parts as separate.
- Mark hole points through each bracket.
 - Centre punch marked hole positions.
 - Drill Ø5mm holes.
 - Vacuum swarf and clean after drilling.
 - Apply Cold Galvanising paint to holes.
 - Apply Butyl patches concentric with each drilled hole.
 - Locate the rivets through each bracket into drilled holes. Set all rivets.
 - Fasten RLT600 base as per instructions.

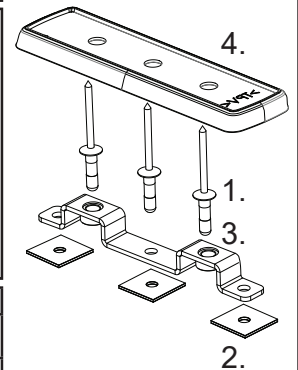

Item	Component Name	Qty	Part No.
1	Stavax Rivet BS 11 4.8mm	6	H060
2	Butyl Patch	6	CA1397
3	Quick Mount Bracket	2	CA1506
4	RLT600 Skirt High	2	M829
5	Instructions	1	R1011

Issue: 03

Document No: R1011

Prepared by: Kayle Everett